


Encore PowerPulse™ Spray Valve Installation Instructions

PACKAGE CONTENTS:

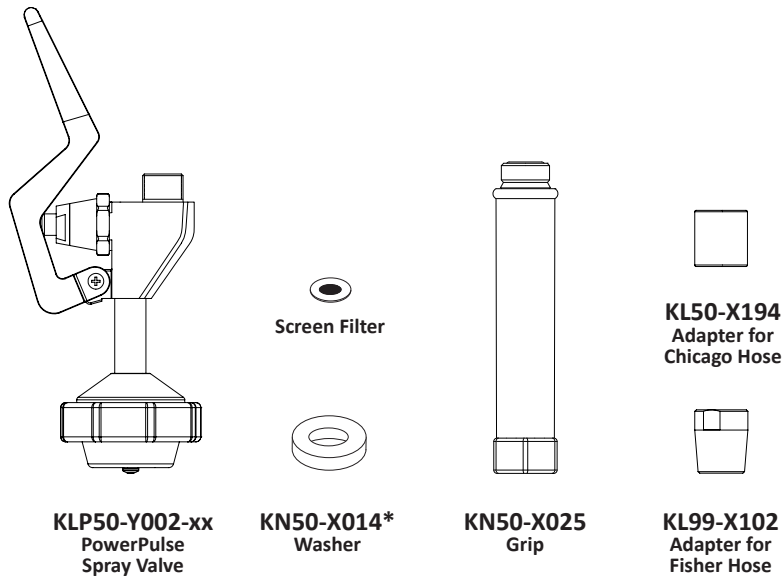

INSTALLATION INSTRUCTIONS:

1. Turn off water supply.
2. Remove existing spray valve and grip. (See Step 1)
3. After removal of the existing spray valve and grip, screw new Encore Kool Grip onto existing hose. (See Step 2)
4. Insert screen filter onto new Encore PowerPulse sprayer. (See Step 3)
5. Hand tighten the PowerPulse spray valve onto the Kool Grip counter clockwise until snug. No tools required; hand tighten only. (See step 4)
6. Turn on water supply and check for leaks.

NOTE:

When installing Encore Grip to existing competitor's hose, use adapter KL50-X194 for Chicago hose or KL99-X102 for Fisher hose. (See Inset)

*When using a non-Encore grip, use the washer (KN50-X014) that is provided.

